


Alcatel

E395 VOICE / E395 VOICE DUO / E395 VOICE TRIO

www.alcatel-home.com



Start Up Guide

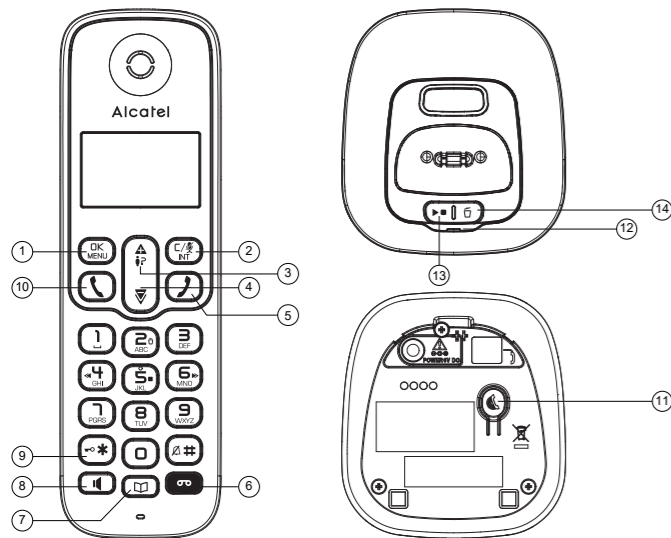

ENGLISH

BEFORE 1st USE

Connecting your phone:

- Connect plugs in corresponding sockets in the base station. Plug the telephone line into telephone socket and insert power plug in an electrical outlet.
- Insert batteries in Handset.

Before you start to use your telephone, charge batteries continuously for 15 hours.

⚠ only use plug adapter supplied with the unit and rechargeable batteries with your phone.

Handset / Base Station Keys

- OK/Menu key**
- Back/Mute/Intercom key**
- & 4. Navigation key**
- Hang-up/Exit key**
- Direct access key to listen new voice messages**
- Phonebook key**
- Loudspeaker key**
- Star key** - To lock / unlock keypad; toggle between the external and internal calls
- Talk key / Recall (Flash) key** - To access to operator services*
- Paging key** - To locate handset / to start registration procedure.

When multiple handsets are delivered, they are pre-registered on the base station. Handset registration is only necessary when you buy extra handsets or if a handset has become faulty.

- LED**
Slow Flashing: when new voice message is recorded.
On: When AC power is connected.
- ▶■**
Press to play the message.
Press again to stop the message playback.
- ☒**
Press once to delete the message during playback.
Press and hold to delete all the messages.
Note: New voice messages will not be deleted.

*Subject to subscription and availability of the service from the fixed line operator.

Display icons

- Indicates battery is fully charged.
- Indicates battery is fully discharged.
- Indicates that an external call is connected or held.
Icon blinks when receiving an incoming call.
- Indicates you have a new voice mail message*.
- Indicates you have new missed calls*.
- Displays when the alarm clock is activated.
- Displays when handsfree is activated.
Indicate when the telephone answering machine (TAM) is turned on.
Flash when new TAM messages are received.
- Displays when ringer volume is turned off.
Indicates that the handset is registered and within range of the base station.
Icon blinks when the handset is out of range or is searching for a base.
- Displays when in menu mode to confirm your selection.
- Indicates that more options are available.
 Use the UP / DOWN keys to scroll up / down.
- Displays when in menu mode.
Select BACK to return to the previous menu level.

Set language and flashtime to operate correctly on your network:

- / or select **HS SETTINGS** / / or select **LANGUAGE** / / or select your desired language / .
- / or select **BS SETTINGS** / / or select **FLASH TIME** / / or select **SHORT / MEDIUM** or **LONG** / .

Using the phone

Receive and end a call

- or

Make a call

- either before or after dialing your number.
- From redial list: / or / .
- From call log list*: / or / .
- Note: You need to subscribe to Caller Line Identification service to be able to see the caller's number or name in the call log.
- From direct memories: long press on **KEY 1** or **KEY 2** or **KEY 3** in idle mode.
- From phonebook: / or / .
- To activate/dsactivate handsfree .

To make an internal call

- If only 2 registered handsets: / .
- If more than 2 registered handsets: / / enter the handset number.
- To ring all handsets to intercom: 9.

To make a three-party conference call: during call / / **INTERCOM** / / enter handset number or 9 to ring all handset / on the called handset to answer / long press / .

Phonebook settings: 20 entries

To register in phonebook

/ or to select **PHONEBOOK** / / / select **ADD** / enter name of contact / / enter number of contact / / select melody / .

To register the direct memories in keys 1, 2 & 3

/ or select **HS SETTINGS** / / or select **DIRECT MEM** / / or select **KEY 1, KEY 2** or **KEY 3** / / edit or enter the number / .

General settings

- This phone can be customized according to your preferences, to access the different possibilities press: .
- To customize handset (name, melody, language,...): or select **HS SETTINGS** / .
- To change PIN, registration handset, reset: or select **BS SETTINGS** / .

Answering machine setting

Answering machine operation by handset

Turn the answering machine on or off

- / or to select **ANS. MACHINE** / / or to select **TAM ON/OFF** / / or to select **ON** or **OFF** / .

Set the answer mode

- / or to select **ANS. MACHINE** / / or to select **TAM SETTINGS** / / to select **ANSWER MODE** / / or to select **ANSWER ONLY** or **ANS & REC** / .

Record a personalised outgoing message

- / or to select **ANS. MACHINE** / / or to select **TAM SETTINGS** / / to select **OGM SETTINGS** / / or to select **ANSWER ONLY** or **ANS & REC** / / or to select **RECORD MESS** / to start recording / to end recording.

Playback and delete messages

- / or to select **ANS. MACHINE** / / to select **MSG PLAYBACK** / to start playback.
- During message playback you can press , then or to select options to **DELETE** the current message.

Set ring delay

- / or to select **ANS. MACHINE** / / or to select **TAM SETTINGS** / to select **ANSWER DELAY** / or to select **2 - 8 RINGS** or **TIME SAVER** / .

To check messages remotely

- Dial your home phone number / while the answering machine playing greeting message ***** and enter remote access code (master PIN code 0000).

The remote feature lets you perform the following functions:

To	Press this button
Play back messages	5
Stop message playback	8
Erase message	2 (during message playback)
Skip message	6
Turn on answerer	7
Turn off answerer	9

Set the OGM voice language

- / or to select **ANS. MACHINE** / / or to select **TAM SETTINGS** / / or to select **TAM LANGUAGE** / / or to select your preferred language / .

TROUBLESHOOTING

As a general rule, if a problem occurs, remove the batteries from all handsets for about 1 minute, then disconnect and reconnect the power supply to the base and reinstall the handset batteries.

SAFETY

This telephone is not designed for Emergency calls when the main power fails.

Do not use your telephone to notify a gas leak or other potential explosion hazard.

Do not open your device or its power supply to avoid risk of electrical shock.

Do not attempt to open the batteries, as they contain hazardous chemical substances.

Your telephone must be located in a dry place away from hot, humid and direct sunlight condition. To avoid radio signal interference, place the phone at least 1 meter away from other electrical appliances or other phones.

ENVIRONMENT

This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste. The European Union has implemented a specific collection and recycling system for which producers are responsible.

Help us protect the environment in which we live!

CONFORMITY

Hereby, ATLINKS EUROPE declares that the radio equipment type DECT is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.alcatel-home.com
Average power per channel: 10mW
Maximum Output Power (NTP) : 24dBm
Frequency Range : 1880-1900MHz

ATLINKS Europe
28 Boulevard Belle Rive
92500 REUIL-MALMAISON France
Alcatel is a trademark of Nokia, used under license by ATLINKS.
www.alcatel-home.com

E395 Voice
A/W no.: 10002573 Rev.0 (FA/EN)
Made in P.R.C.