

Alcatel

F685 VOICE / F685 VOICE DUO



Start Up Guide

www.alcatel-home.com

- FF Flash FF: TAM memory is full and there are no new messages, only old messages are kept in TAM memory
- /XX Flash XX alternatively with - -: Time is not set and there are XX new voice messages received where XX is from 01 to 59
- -Flash --: Time is not set and there are old voice messages kept in the TAM memory only (no new voice messages)
- XX Steadily ON: Playing the current XX incoming old message
Flash: Playing the current XX incoming new message
- A1/A2 Steadily ON: Playing the current outgoing message (OGM) where A1 is the Answer & Record OGM and A2 is the Answer Only OGM
- XX/An Flash XX alternatively with An: XX new incoming message is now recording. An denotes that the incoming message recording is in progress
- rA Flash: Remote access is in progress
- LX Steadily ON: Indicate the current volume level where X is from 1 to 8 (non-cyclic)

13. Press to turn on the answering machine
Press again to turn off the answering machine
14. Press to play the message
Press again to stop the message playback
15. Press to skip the current message and play the next message
16. Press once to delete the message during playback
Press and hold to delete all the messages
Note: New voice messages will not be deleted
17. Press to repeat playing the current message from the beginning
Press twice to skip backward to the previous message
18. Decrease (-) speaker volume during message playback

*Subject to subscription and availability of the service from the fixed line operator.

Display icons

- Indicates that the Call Blocking function is activated.
- Indicates battery is fully charged.
- Indicates battery is fully discharged.
- Indicates that an external call is connected or held. Icon blinks when receiving an incoming call.
- Indicates you have a new voice mail message*.
- Indicates you have new missed calls*.
- Displays when the alarm clock is activated.
- Displays when handsfree is activated.
- Indicate when the telephone answering machine (TAM) is turned on. Flash when new TAM messages are received.
- Indicates that the handset is registered and within range of the base station. Icon disappears when the handset is out of range or is searching for a base.

Using the phone

Receive and end a call

- /

Make a call

- either before or after dialing your number
 - From redial list: Press / or / .
 - From call log list* - / **CALL LIST** / / or / .
- Note: You need to subscribe to Caller Line Identification service to be able to see the caller's number or name in the call log.
- From direct memories: Press M1 or M2:long press on **KEY 1** or **KEY 2** or **KEY 3** in idle mode.
 - From phonebook: / or / .
 - During a call, to activate/desactivate handsfree: .

To make an internal call

- If only 2 registered handsets: / .
- If more than 2 registered handsets: / or / / select handset number / .
- To ring all handsets to intercom: / or select CALL ALL / .

To make a three-party conference call:

- During call:
 - Press / select **INTERCOM** / / or / select handset number / .
 - Press on the called handset to answer.
 - Long press on the calling handset to establish conference call.

Phonebook settings: 100 entries

To register in phonebook

- / or to select **PHONEBOOK** / / / select **ADD** / enter name of contact / / enter number of contact / / or to select melody / / to save as VIP or to save as CONTACT.

- Notes:
- I appears in the end of name of VIP entry.
 - Phonebook is stored in base unit which is shared with duo handsets.

To register the direct memories in keys M1,M2, 1, 2 & 3

- / or select **HS SETTINGS** / / or select **DIRECT MEM** / / or select
- **M1** or **M2**: / edit or enter the name / / edit or enter the number / / or to select melody / to save as VIP or to save as CONTACT.
- **KEY 1** or **KEY 2** or **KEY 3**: / edit or enter the number / .

General settings

- This phone can be customized according to your preferences, to access the different possibilities, press: / .
- To customize handset (name, melody, language ...): or select **HS SETTINGS** / .
 - To change PIN, registration handset, reset: or select **BS SETTINGS** / .

Answering machine setting

Answering machine operation by handset

Turn the answering machine on or off

- / or to select **ANS. MACHINE** / / or to select **TAM ON/OFF** / / or to select **ON** or **OFF** / .

Set the answer mode

- / or to select **ANS. MACHINE** / / or to select **TAM SETTINGS** / / to select **ANSWER MODE** / / or to select **ANSWER ONLY** or **ANS & REC** / .

Record a personalised outgoing message

- / or to select **ANS. MACHINE** / / or to select **TAM SETTINGS** / / to select **OGM SETTINGS** / / or to select **ANSWER ONLY** or **ANS & REC** / / or to select **RECORD MESS** / to start recording / to end recording.

Playback and delete messages

- / or to select **ANS. MACHINE** / / to select **MSG PLAYBACK** / to start playback.
- During message playback you can press then or to select options to DELETE the current message.

Set ring delay

- / or to select **ANS. MACHINE** / / or to select **TAM SETTINGS** / to select **ANSWER DELAY** / or to select **2 -8 RINGS** or **TIME SAVER** / .

To check messages remotely

- Dial your home phone number/while the answering machine playing greeting message, press and enter remote access code (master PIN code 0000).

The remote feature lets you perform the following functions:

To	Press this button
Play back messages	5
Repeat message	4
Erase message	2 (during message playback)
Skip message	6
Turn on answerer	7
Turn off answerer	9

Set the OGM voice language

- / or to select **ANS. MACHINE** / / or to select **TAM SETTINGS** / / or to select **TAM LANGUAGE** / / or to select your preferred language / .

This telephone is built-in with Smart Call Block feature*. This feature will help you avoid nuisance calls by only allowing some numbers to make your phone ring.

Default setting of Smart Call Block in this telephone is OFF but you can enable it via your phone settings, as explained in the following paragraphs.

*This feature requires a subscription of Caller Line Identification service from your telephone service provider.

CALL BLOCK OVERVIEW

Setting	Explanations
OFF	Call Block function (Block all call with numbers) is Disabled. This is the default mode.
ON	Call Block function is set to Manual. Numbers registered in the black list will not go through and the phone will ring silently. Numbers can be added to the list while the phone is ringing and / or after a call (to enable, see part 1).
CONTACTS	In this automatic mode, any number not registered to your phonebook will be automatically be blocked and not cause your phone to ring. All calls from contacts registered to your phonebook will proceed normally. When this mode is chosen, Contacts OK is displayed on LCD in idle mode unless you have unread messages/missed calls (to enable, see part 2.1).
VIPS	In this second automatic mode, only calls from contacts registered as VIP in your phonebook will go through and cause your phone to ring. Any other number will not ring. When this mode is chosen, VIPS OK is displayed on the LCD in idle mode unless you have unread messages / missed calls (to enable, see part 2.2)
ANONYME	This extra feature allows you to block call that do not have a number attached to them (ie private calls, international calls, etc). This option can be enabled on top of any of the previous four (to enable, see part 3)

1. Manual call block mode

Manual call block is the easiest option when starting out. When you chose **ON** in the call block settings, all calling numbers registered in your blacklist will be blocked.

You can add/remove numbers from that list at any time.

How to block an incoming call:

When the phone is ringing and before answering, press . It will terminate the call and offer you the option to register the number to the blacklist in one click.

Then to confirm the registration of this number in the blacklist, press . IMPORTANT: if you don't confirm, the number will not be added to the blacklist and the next call will go through normally.

1.1. Enable MANUAL mode

MENU	CALL BLOCK	BLOCK SET.	OFF
			ON
			VIP OK
			CONTACTS OK

Press , press or to select **CALL BLOCK**.

Press , press or to select **BLOCK SET**.

Press , press or to select **ON** (manual mode).

OR

In idle mode, press to access **BLOCK SET**. directly. After you enable this option, the call block icon will be displayed on the LCD.

1.2. Add numbers to Blacklist

- In idle mode,
1. Press key, **BLOCK SET**. is displayed, or Press to press or to select **CALL BLOCK**, press to show **BLOCK SET**.
 2. Press or to select **BLACKLIST**.
 3. Press , press or to select **ADD**, enter number to be blocked, press to save.

NOTE: 2 more ways to add incoming and outgoing call numbers in Block list:

1. From incoming call numbers
 - Press / , press or to select **CALL LIST** , or long press > .
 - Press / , press or to select call list entry.
 - Press / , press or to select to **ADD to BLIST**.
 - Press to show selected number, press to save to Block list.
2. From outgoing call numbers
 - press >, press or to select redial list entry.
 - Press / , press or to select to **ADD to BLIST**.
 - Press to show selected number, press to save to Block list.

1.3. Edit numbers in Blacklist

- In idle mode,
1. Repeat step 1 and 2 in Section 1.2.
 2. Press , press or to select **EDIT**, press or to select number to be edited, press to edit, and then press to save.

1.4. Delete numbers in Blacklist

1.4.1. Delete a number from blacklist

- In idle mode,
1. Repeat step 1 and 2 in Section 1.2.
 2. Press , press or to select **DELETE**, press or to select number to be deleted, press to confirm.

1.4.2. Delete all numbers from blacklist

- In idle mode,
1. Repeat step 1 and 2 in Section 1.2.
 2. Press , press or to select **DELETE ALL**, press , **CONFIRM?** is shown, and then press to confirm.

2. Automatic call block mode

2.1. VIPs only

In this restrictive automatic mode, only calls from numbers registered as VIP in your phonebook will go through and make your phone ring.

MENU	CALL BLOCK	BLOCK SET.	OFF
			ON
			VIP OK*
			CONTACTS OK

Press , press or to select **CALL BLOCK**.

Press , press or to select **BLOCK SET**.

Press , press or to select **VIP OK** (Automatic mode).

2.2. Contacts only

In this broad automatic mode, only calls from contacts registered in your phonebook (normal and VIP) will go through and make your phone ring.

MENU	CALL BLOCK	BLOCK SET.	OFF
			ON
			VIP OK
			CONTACTS OK

Press , press or to select **CALL BLOCK**.

Press , press or to select **BLOCK SET**.

Press , press or to select **CONTACTS OK** (Automatic mode).

3. Anonymous call block mode

This feature allows you to block numbers that do not display a number on your phone. It can be enabled or disabled independently from the previous call block modes.

MENU	CALL BLOCK	BLOCK ANONYM	PRIVATE*
			ALL
			OFF

Press , press or to select **CALL BLOCK**.

Press , press or to select **BLOCK ANONYM**.

Press , press or to select one of the options.

3.1. Block Private Calls

This mode will block incoming calls that have been purposely kept their numbers private from you.

- In idle mode,
1. Press key, **BLOCK SET**. is displayed, or Press to press or to select **CALL BLOCK**, press to show **BLOCK SET**.
 2. Press or to select **BLOCK ANONYM**.
 3. Press , press or to select **PRIVATE**, press to confirm.
 4. will be displayed on the lower side of LCD.

3.2. Block All Anonymous Calls

This mode will block all incoming calls, including private calls, international calls, pay phone and other out-of-area calls.

- In idle mode,
1. Repeat step 1 and 2 in Section 3.1.
 2. Press , press or to select **ALL**, press to confirm.
 3. will be displayed on the lower side of LCD.

3.3. Set Block Anonymous Calls OFF

- In idle mode,
1. Repeat step 1 and 2 in Section 3.1.
 2. Press , press or to select **OFF**, press to confirm.
 3. will only disappear from the LCD if the regular call block (see 1. And 2.) is also set to OFF.

TROUBLESHOOTING

As a general rule, if a problem occurs, remove the batteries from all handsets for about 1 minute, then disconnect and reconnect the power supply to the base and reinstall the handset batteries.

OR

This telephone is not designed for Emergency calls when the main power fails. Do not use your telephone to notify a gas leak or other potential explosion hazard.

Do not open your device or its power supply to avoid risk of electrical shock. Do not attempt to open the batteries, as they contain hazardous chemical substances. Your telephone must be located in a dry place away from hot, humid and direct sunlight condition. To avoid radio signal interference, place the phone at least 1 meter away from other electrical appliances or other phones.

SAFETY

This telephone is not designed for Emergency calls when the main power fails. Do not use your telephone to notify a gas leak or other potential explosion hazard.

Do not open your device or its power supply to avoid risk of electrical shock. Do not attempt to open the batteries, as they contain hazardous chemical substances. Your telephone must be located in a dry place away from hot, humid and direct sunlight condition. To avoid radio signal interference, place the phone at least 1 meter away from other electrical appliances or other phones.

ENVIRONMENT

This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste. The European Union has implemented a specific collection and recycling system for which producers are responsible.

Help us protect the environment in which we live!

CONFORMITY

Hereby, ATLINKS EUROPE declares that the radio equipment type DECT is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

www.alcatel-home.com
Average power per channel: 10mW
Maximum Output Power (NTP): 24dBm
Frequency Range : 1880-1900MHz