
 


Fig.1

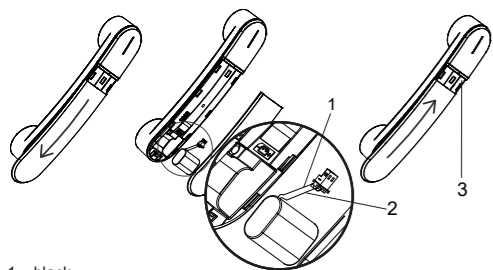 

1. black
2. red
3. LED
Slow Flashing: when new voice message is received. Quick flashing: during incoming call.


Fig.2

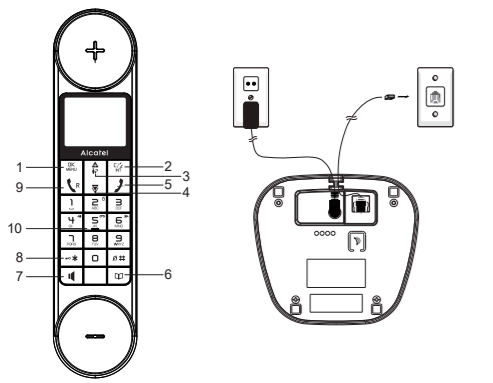

ENGLISH

Before 1st use
Connecting your phone:
- Connect plugs in corresponding sockets in the base station.
- Plug the telephone line into telephone socket and insert power plug in an electrical outlet.
- Insert battery pack in handset (Fig 1).
Before you start to use your telephone, charge battery continuously for 15 hours.
Only use plug adapter supplied with the unit and rechargeable battery pack with your phone.

 Phone Function Keys (Fig 2)
1. OK/Menu key
2. Back/Mute/Intercom key
3 & 4. Navigation key
5. Hang-up/Exit key
6. Phonebook key
7. Loudspeaker key
8. Star key - To lock / unlock keypad; toggle between the external and internal calls
9. Talk key / Recall (flash) key - to access to operator services*
10. Direct access key to listen new voice messages
Long press key 5 for 3 seconds to listen new voice messages

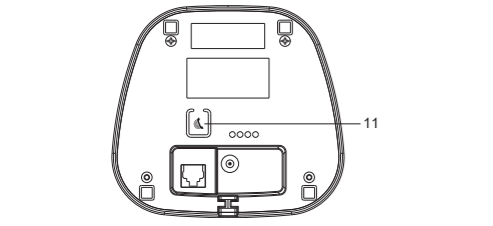

11.
Press on the base station to page your handset. It will ring for approximately 60 seconds.
Press and hold on the base station for about five seconds, the base station is entered into registration mode and allows handset registration.

LCD icons
Indicates battery is fully charged.
Indicates battery is fully discharged.
Indicates that an external call is connected or held. Icon blinks when receiving an incoming call.
Indicates you have a new voice mail message*.
Indicates you have new missed calls*.
Displays when the alarm clock is activated.
Displays when handsfree is activated.
Displays when ringer volume is turned off.
Indicates that the handset is registered and within range of the base station.
Icon disappears when the handset is out of range or is searching for a base.

Indicate when the telephone answering machine (TAM) is turned on.
Flash when new TAM messages are received.
Indicate that call blocker function is turned on.
Displays when in menu mode.
Press to return to the previous menu level.

Your Telephone Operations
Switching on / off
- Press and hold the key.
Notes: When the handset is OFF, it cannot be used for making calls including emergency calls. There will be no ringing during an incoming call.
To answer a call, you will need to switch it back on. It may take some time for the handset to re-establish a radio link with the base unit.

To lock / unlock the keypad
- Press and hold the key.
Note: Incoming calls can still be answered even if the keypad was locked.

Set time and date
Note: If you subscribe to the Caller Display service, the time and date will be set automatically when you receive a call, but you may still need to set the correct year.
- select HS SETTINGS / DATE & TIME / DATE FORMAT, TIME FORMAT, SET TIME or SET DATE to set format or current date and time.

Change your handset's name
- select HS SETTINGS / RENAME HS / OK to display the current handset name / to delete the characters / enter the new name (maximum 10 characters) / confirmation beep.

Make and answer calls
Make a call
- either before or after dialing your number.
- From redial list: / /
- From call log list: / /
Note: You need to subscribe to Caller Line Identification service to be able to see the caller's number or name in the call log.
- From phonebook: / /
- From direct memories: long press on KEY 1 or KEY 2 or KEY 3 in idle mode.

Answer and end a call
- / /
IMPORTANT NOTE: You can simply place the handset back on its base station or charger pod to end the call.

Use handsfree
- To activate / deactivate handsfree: /

Adjust the earpiece volume
During a call, press / or to select from VOLUME 1 to VOLUME 5.

Mute / unmute microphone
- to turn on / off the microphone.

Phonebook settings: 50 entries
Store a contact in the phonebook
- Press to access phonebook or / / or to select PHONEBOOK / OK / OK to select ADD / OK / enter the name of contact / OK / enter the number of contact / OK / / or to select melody / confirmation beep (to delete characters).

Modify a phonebook entry
- Press to access phonebook or / / or to select PHONEBOOK / OK / / or to select phonebook entry / OK / / or to select EDIT / OK / current name is displayed / edit the name / OK / edit the number / OK / edit melody / OK confirmation beep.

To add the desired phonebook record to VIP list
- / / or to select the desired phonebook record to VIP list / OK / / or select ADD TO VIP / OK .
VIP records are marked with * at the end of name.

Modify a phonebook entry
- Press to access phonebook or / / or to select PHONEBOOK / OK / / or to select phonebook entry / OK / / or to select EDIT / OK / current name is displayed / edit the name / OK / edit the number / OK / edit melody / OK confirmation beep.

Delete a phonebook entry
- Press to access phonebook or / / or to select PHONEBOOK / OK / / or to select phonebook entry / OK / / or to select DELETE / confirmation beep.

Delete all entries from the phonebook list
- Press to access phonebook or / / or to select PHONEBOOK / OK / / or to select phonebook entry / OK / / or to select DELETE ALL / CONFIRM? / OK / confirmation beep.

Add / edit direct access memory
- / / or to select HS SETTINGS / OK / / or to select DIRECT MEM. / OK / / or to select KEY 1 or KEY 2 or KEY 3 / OK / edit or enter the number / OK / confirmation beep.

Using the redial list
The redial list stores the last 10 numbers dialed.
Save a redial number into the phonebook
- / / or to select an entry / OK to select ADD TO PB / OK to display NAME / enter the name of contact (maximum 12 characters) / OK / OK / / or to select melody / OK / return the display to redial list.

Using the call log: stored up to 20 external calls
Access call log
- / / or .

Save call list entry into the phonebook
- / / or to select an entry / OK / / or to select ADD TO PB / OK to select and enter the name of contact (maximum 12 characters) / OK / OK / / or to select melody / OK .

Delete a Call Log entry
- / / or to select an entry / OK / / or to select DELETE / confirmation beep.

Delete all entries in the Call Log
- / / or to select an entry / OK / / or to select DELETE ALL / OK / CONFIRM? / OK / confirmation beep.

Handset Tone
Set the ring volume
There are 5 ringer volume options (VOLUME OFF, VOLUME 1, VOLUME 2, VOLUME 3, VOLUME 4 and VOLUME 5).
- / / or to select HS SETTINGS / OK / / or to select RING SETUP / OK / / or to select RING VOLUME / OK / / or to the desired volume level / OK / confirmation beep.

Set the ring melody: 10 ring melodies
- / / or to select HS SETTINGS / OK / / or to select RING SETUP / OK / / or to select EXT. RING or INT. RING / OK / / or to the desired melody / OK / confirmation beep.

Activate / deactivate key tone
- / / or to select HS SETTINGS / OK / / or to select TONE SETUP / OK / / or to select KEY TONE / OK / / or to select ON or OFF / OK / confirmation beep.

Activate / deactivate auto answer and auto hang-up
- / / or to select HS SETTINGS / OK / / or to select AUTO ANSWER / OK / / or to select ON or OFF / OK / confirmation beep.

Set date / time format
Set time format
- / / or to select HS SETTINGS / OK / / or to select DATE & TIME / OK / / or to select TIME FORMAT / OK / / or to select 12 HR or 24 HR / OK / confirmation beep.

Set date format
- / / or to select HS SETTINGS / OK / / or to select DATE & TIME / OK / / or to select DATE FORMAT / OK / / or to select DD-MM-YY or MM-DD-YY / OK / confirmation beep.

Set alarm
- / / or to select HS SETTINGS / OK / / or to select ALARM / OK / / or to select OFF, ON.
- if select ON, enter time (HH-MM) for alarm (24 hours format only) / OK / SNOOZE / OK to select ON or OFF / confirmation beep.

Advanced use of your telephone
Change Master PIN
The Master PIN is used for registration / unregistration of handsets. The default Master PIN number is 0000.
Note: If you forget your PIN code, you can reset it to its default 0000 using a handset Reset.

- / / or to select BS SETTINGS / OK / / or to select CHANGE PIN / OK / enter current master pin when prompted / OK / enter new PIN / OK / confirmation beep.

Register your handset
IMPORTANT: Handset registration is only necessary when you buy extra handsets or if a handset has become faulty.
Up to 5 handsets can be registered to one base station. The Master PIN is required before you can register or unregister handsets.
- On the base station, press and hold the key for 5 seconds.
- On the handset, press / / or to select REGISTRATION / OK / enter Master PIN when prompted / OK / PLEASE WAIT displayed / confirmation beep.

Change the dial mode
- / / or to select BS SETTINGS / OK / / or to select DIAL MODE / OK / / or to select TONE or PULSE / OK / confirmation beep.

Answering machine setting
Answering machine operation by handset
Turn the answering machine on or off
- / / or to select ANS. MACHINE / OK / / or to select TAM ON/OFF / OK / / or to select ON or OFF / OK .

Set the answer mode
- / / or to select ANS. MACHINE / OK / / or to select TAM SETTINGS / OK / to select ANSWER MODE / OK / or to select ANSWER ONLY or ANS & REC / OK .

Record a personalised outgoing message
- / / or to select ANS. MACHINE / OK / / or to select TAM SETTINGS / OK / to select OGM SETTINGS / OK / or to select ANSWER ONLY or ANS & REC / OK / or to select RECORD MESS / OK to start recording / OK to end recording.

Playback and delete messages
- Long press key 5 on handset for 3 seconds to play messages or OK / / or to select ANS. MACHINE / OK / to MSG PLAYBACK / OK / to start playback.
- During message playback you can press OK , then / or to select options to DELETE the current message.

To check messages remotely
- Dial your home phone number / while the answering machine playing greeting message * and enter remote access code (master PIN code 0000).

Table with 2 columns: To, Press this button. Rows include Play back messages (5), Stop message playback (8), Erase message (2), Skip message (6), Turn on answerer (7), Turn off answerer (9).

A. Call Blocker Function
If you have subscribed to Caller ID service, you can use the call blocker feature to block certain calls automatically by adding numbers into the block list. "Black list" and "Caller ID Number" will be displayed without ringing.

A1. Choose the block mode
To activate the call blocker feature, you must first choose the block mode (block all calls, allow only VIP entries, or block blacklist entries).
- / / or to select CALL BLOCKER / OK / / or to select SETTINGS / OK / or to select BLOCK MODE / OK / or to select BLOCK ALL, ALLOW VIP, or BLOCK BLIST / OK .

A2. Add a Number to the Black List
- / / or to select CALL BLOCKER / OK to show BLACK LIST / twice to show ADD / enter the name / OK to store the number to the black list / OK .

A3. Do Not Disturb function
You can choose 2 block time settings: always on or time period of blocking.

A.3.1. Always Blocking calls
Follow Section A.1 to choose the block mode / press OK to select ALWAYS ON.

A.3.2. Blocking calls in period of time
Follow Section A.1 to choose the block mode / OK / or to select TIMED / OK to select TIME ON / Enter the time information in 24 hour format / OK to select TIME OFF / Enter the time information in 24 hour format / OK .

A4. Turn the Block Mode Off
All calls will ring normally when the block mode is off.
Follow Section A.1 to choose the block mode / OK / or to select OFF / OK .

A5. Block network call types (e.g. international, withheld numbers)
You can choose to block network call types (e.g. international, withheld numbers) by setting the respective call type to ON.
- / / or to select CALL BLOCKER / OK / / or to select SETTINGS / OK / or to select CALL TYPE / OK / or to select WITHHELD, INTERNAT'L, UNAVAILABLE, or PAYPHONE / OK / or to select ON or OFF / OK .

Troubleshooting
If you have difficulty with your phone, please try the suggestions listed below.
As a general rule, if a problem occurs, remove the battery pack from the handset in your installation for about 1 minute, then disconnect and reconnect the power supply to the base and reinstall the handset battery pack.

Table with 2 columns: Always check first that, and description of the problem and solution. Includes issues like 'cannot make a call', 'phone does not ring', 'hear beeps from handset while on a call', and 'handset's battery pack are running low'.

Table with 3 columns: Problem, Cause, Solutions. Includes issues like 'The unit does not record new messages', 'The caller cannot leave a message', 'I cannot operate the answering machine remotely', 'While recording an outgoing message or listening to messages, the unit rings and recording stops'.

The store where you bought your telephone can also provide you with information and after - sales support.

SAFETY
This telephone is not designed for Emergency calls when the main power fails.
Do not use your telephone to notify a gas leak or other potential explosion hazard!
Do not open your device or its power supply to avoid risk of electrical shock. Do not attempt to open the batteries, as they contain hazardous chemical substances.
Your telephone must be located in a dry place away from hot, humid and direct sunlight condition. To avoid radio signal interference, place the phone at least 1 meter away from other electrical appliances or other phones.

ENVIRONMENT
This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste.
Help us protect the environment in which we live!

CONFORMITY
The logo printed on the products indicates the conformity with all essential requirements and all applicable directives. You can download the Declaration of Conformity from our website www.alcatel-home.com

Atlinks Europe 28 Bd de Belle Rive 92500 Rueil Malmaison France
RCS Nanterre 508 823 747
© ATLINKS 2021 - Reproduction prohibited.
The manufacturer reserves the right to modify the specifications of its products in order to make technical improvements or comply with new regulations.
ALCATEL and ATLINKS are registered trademarks.
Alcatel is a trademark of Nokia, used under license by ATLINKS