Alcatel

F370 PLUS VOICE

دفترچه راهنما

قبل از استفاده از دستگاه راهنمای زیر را مطالعه فرمایید

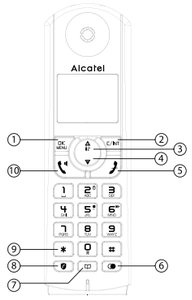

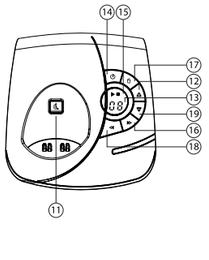

کلیدهای دستگاه پایه / گوشی

1. کلید OK/ منو
2. کلید تماس داخلی/ بازگشت
3. و 4. کلیدهای ناوبری
5. کلید خروج / کلید قطع تماس
6. کلید تماس مجدد
7. کلید دفترچه تلفن
8. کلید انسداد تماس- در حالت آماده به کار: دسترسی مستقیم به منوی انسداد تماس
9. کلید ستاره- جابجایی بین تماس داخلی و خارجی

کلید # - برای فعال کردن / غیر فعال کردن زنگ فشار داده و نگه دارید.

10. کلید صحبت کردن/ بلندگو
11. کلید مکان یابی- برای پیدا کردن گوشی/ و برای شروع ثبت گوشی

زمانی که چندین گوشی ارائه شده باشد همگی از قبل روی پایه ثبت شده اند. اما زمانی که گوشی اضافه خریداری می کنید یا گوشی درست کار نمی کند لازم است که آن را ثبت / یا مجددا ثبت کنید.

12. افزایش صدای بلندگو در حین پخش پیغام
13. صفحه نمایش پایه-نشانگر دستگاه پیغامگیر

0F-> -- زمانی که دستگاه پیغامگیر خاموش است

XX -> 0n زمانی که پیغامگیر روشن می باشد / XX نشانگر تعداد پیغام ها در سیستم پیغامگیر است

00 زمانی که پیغام جدیدی ندارید

XX بصورت چشمک زن: تعداد پیغام های جدید

ZZ بصورت ثابت: نشانگر تعداد پیغام های قبلی

XX/FF بصورت چشمک زن: نشانگر تعداد پیغام های جدید هنگامی که حافظه پر است

FF بصورت چشمک زن: هنگامی که حافظه پر است و پیغام جدیدی وجود ندارد، تنها پیغام های قبلی در حافظه پیغامگیر ذخیره می شود

XX /-- بصورت چشمک زن: نشانگر تنظیم نبودن ساعت / XX نشانگر تعداد پیغام های جدید دریافت شده

-- بصورت چشمک زن: نشانگر تنظیم نبودن ساعت / نشانگر زمانی که پیغام جدید ندارید

XX بصورت ثابت: در حال پخش پیغام های قدیمی

بصورت چشمک زن: در حال پخش پیغام های جدید

A1/A2 بصورت ثابت: در حال پخش پیغام خوش آمد گویی (OGM) درحالیکه A1 نشانگر حالت "ضبط پیغام و پاسخگویی" و A2 نشانگر حالت " فقط پاسخگویی" می باشد

An /XX بصورت چشمک زن: نشانگر تعداد پیغام های در حال ضبط

rA بصورت چشمک زن: سیستم دسترسی به پیغامگیر از راه دور فعال شده و در حال استفاده است

LX بصورت ثابت: نشانگر میزان صدا از 8-1

14. - کلید روشن/ خاموش کردن سیستم پیغامگیر
15. - کلید پخش/ توقف پخش پیغام ها
16. - کلید پخش پیغام بعدی
17. - کلید حذف پیغام در حال پخش / برای حذف همه پیغام ها این کلید را فشار داده و نگه دارید.
18. - کلید پخش مجدد پیغام / برای بازگشت به پیغام قبلی دوبار این کلید را فشار دهید
19. - کلید کاهش میزان صدا در هنگام پخش پیغام

نمادهای صفحه نمایش

- نشانگر فعال بودن انسداد تماس
- نشانگر پر بودن باتری
- نشانگر خالی بودن باتری
- بصورت ثابت: در حال مکالمه / انتظار تماس
  بصورت چشمک زن: دریافت تماس ورودی
- نشانگر دریافت پیغام جدید (صندوق پستی مخابرات)
- نشانگر تماس از دست رفته
- نشانگر فعال بودن "ساعت هشدار"
- نشانگر فعال بودن اسپیکر
- نشانگر روشن بودن سیستم پیغامگیر / در حالت چشمک زن نشان دهنده دریافت پیغام جدید است
- نشانگر خاموش بودن زنگ تلفن
- نشانگر این است که گوشی ثبت شده و در فاصله مناسبی از پایه قرار دارد.
  زمانی که گوشی در فاصله مناسبی از پایه قرار ندارد یا در حال جستجوی پایه است این نماد محو می–شود.

نصب اولیه دستگاه

-اتصالات مختلف را روی پایه ایجاد کنید.
-کابل خط تلفن را به سوکت تلفن روی دیوار وصل کنید و کابل برق را به پریز برق وصل کنید.
- باتری ها را داخل گوشی قرار دهید.گوشی را جهت شارژ اولیه به مدت 15 ساعت روی پایه قرار دهید.
فقط از آداپتور AC و باتری های قابل شارژ درون جعبه استفاده کنید.

استفاده از دستگاه

دریافت و خاتمه تماس

- برای دریافت تماس و پایان دادن / قطع تماس از کلیدهای ✆ یا ✆ استفاده کنید.

برقراری تماس

- قبل یا بعد از شماره گیری از کلید ✆ استفاده کنید.
- از لیست شماره گیری مجدد: کلید ◉ / ▲ یا ▼ / ✆ را بزنید.
- از لیست تماس ورودی (call log): کلید کلید ▲ / ▲ یا ▼ / ✆ را بزنید.
- از دفترچه تلفن: کلید ▯ / ▲ یا ▼ / OK/MENU را بزنید.
- در حین تماس جهت فعال/ غیرفعال کردن بلندگو کلید ✆ را بزنید.

برقراری تماس داخلی

-اگر فقط 2 گوشی ثبت شده است: کلید C/INT را بزنید.
- اگر بیش از 2 گوشی ثبت شده است به این ترتیب عمل کنید: کلید C/INT / ▲ یا ▼ / انتخاب شماره گوشی/ OK/MENU .
- برای زنگ خوردن تمامی گوشی ها جهت تماس داخلی به این ترتیب عمل کنید: کلید C/INT / ▲ یا ▼ / انتخاب CALL ALL/ OK/MENU .

برقراری تماس کنفرانسی سه نفره

درحین تماس:
- کلید OK/MENU / انتخاب INTERCOM / OK/MENU / شماره گوشی را وارد کنید.
-کلید ✆ را روی گوشی در حال تماس فشار دهید تا تماس داخلی را پاسخ دید.
-کلید ✱ را روی گوشی در حال زنگ خوردن به مدت طولانی تر فشار دهید تا تماس کنفرانسی برقرار گردد.

تنظیمات دفترچه تلفن: ذخیره 50 شماره تلفن

برای ثبت شماره و نام در دفترچه تلفن به این ترتیب عمل کنید:
OK/MENU / ▲ یا ▼ / انتخاب PHONEBOOK / OK/MENU / OK/MENU / انتخاب ADD / وارد کردن نام مخاطب / OK/MENU / وارد کردن شماره مخاطب / OK/MENU / انتخاب آهنگ مورد نظر/ OK/MENU .

• در صورتی که دو یا سه گوشی تلفن داشته باشید، تمامی شماره ها ی لیست تماس ورودی (call log) یا آخرین شماره لیست شماره گیری مجدد در تمامی گوشی های موجود به اشتراک گذاشته می شود.

تنظیمات کلی

شما می توانید گوشی خود را بر اساس سلیقه خود تنظیم کنید تا به قابلیت های گوناگون آن دسترسی داشته باشید، برای این کار دکمه OK/MENU را فشار دهید.
- برای تنظیم گوشی (نام، آهنگ، زبان و ...) به این ترتیب عمل کنید: ▲ یا ▼ / انتخاب HS SETTINGS / OK/MENU .
- برای تغییر کد (PIN)، ثبت گوشی، بازنشانی (reset) به این ترتیب عمل کنید: ▲ یا ▼ / انتخاب BS SETTINGS / OK/MENU .

تنظیم سیستم پیغامگیر

عملکرد سیستم پیغامگیر در گوشی تلفن

برای خاموش یا روشن کردن سیستم پیغامگیر به ترتیب زیر عمل کنید:
- OK/MENU / ▲ یا ▼ / انتخاب ANS. MACHINE / OK/MENU / ▲ یا ▼ / انتخاب TAM ON/OFF / OK/MENU / ▲ یا ▼ / انتخاب ON یا OFF / OK/MENU .

تنظیم حالت پاسخگویی

- OK/MENU / ▲ یا ▼ / انتخاب ANS. MACHINE / OK/MENU / ▲ یا ▼ / انتخاب TAM SETTINGS / OK/MENU / ▲ یا ▼ / انتخاب ANSWER MODE / OK/MENU / ▲ یا ▼ / انتخاب ANSWER ONLY (فقط پاسخگویی) یا ANS & REC (ضبط پیغام و پاسخگویی) / OK/MENU .

ضبط پیغام خوش آمد گویی

برای ضبط پیغام خوش آمد گویی خود به ترتیب زیر عمل کنید:
- OK/MENU / ▲ یا ▼ / انتخاب ANS. MACHINE / OK/MENU / ▲ یا ▼ / انتخاب TAM SETTINGS / OK/MENU / انتخاب OGM SETTINGS/ OK/MENU / ▲ یا ▼ / انتخاب ANSWER ONLY (فقط پاسخگویی) یا ANS & REC (ضبط پیغام و پاسخگویی) / OK/MENU / ▲ یا ▼ / انتخاب RECORD MESS / OK/MENU را برای شروع ضبط پیغام بزنید / OK/MENU را برای اتمام ضبط بزنید.

پخش و حذف پیغام

برای پخش و حذف پیغام ها به ترتیب زیر عمل کنید:
- OK/MENU / ▲ یا ▼ / انتخاب ANS. MACHINE / OK/MENU / انتخاب MSG PLAYBACK / OK/MENU را برای پخش پیغام بزنید.
- در حین پخش پیغام شما می توانید OK/MENU و سپس ▲ یا ▼ را بزنید تا گزینه حذف پیغام فعلی را انتخاب کنید.

تاخیر در پاسخگویی و تنظیم تعداد دفعات زنگ قبل از فعال شدن پیغامگیر

به ترتیب زیر عمل کنید:
- OK/MENU / ▲ یا ▼ / انتخاب ANS. MACHINE / OK/MENU / ▲ یا ▼ / انتخاب TAM SETTINGS / OK/MENU / انتخاب ANSWER DELAY / ▲ یا ▼ / انتخاب RINGS 2-8 یا TIME SAVER / OK/MENU .

بررسی پیغام ها از راه دور

برای چک کردن پیغام ها از راه دور به ترتیب زیرعمل کنید:
- با تلفن خود تماس بگیرید / زمانی که سیستم پیغامگیر شروع به پخش پیغام خوش آمدگویی می کند کلید ✱ را فشار داده و کد دسترسی از راه دور را وارد کنید (کد دسترسی بصورت پیش فرض 0000 است).

عملکرد کنترل از راه دور سیستم پیغامگیر را در جدول زیر ببینید:

عملکرد	کلید مربوطه
پخش پیغام	**5**
باز پخش پیغام فعلی	**4**
حذف پیغام	**2 (در حین پخش پیغام)**
رد کردن پیغام	**6**
روشن کردن پاسخگویی	**7**
خاموش کردن پاسخگویی	**9**

تنظیم زبان پیغام خوش آمد گویی (OGM)

به ترتیب زیر عمل کنید:
- OK/MENU / ▲ یا ▼ / انتخاب ANS. MACHINE / OK/MENU / ▲ یا ▼ / انتخاب TAM SETTINGS / OK/MENU / ▲ یا ▼ / انتخاب LANGUAGE / OK/MENU / ▲ یا ▼ / انتخاب زبان مورد نظر/ OK/MENU .

انسداد تماس هوشمند

این تلفن دارای قابلیت انسداد تماس هوشمند (Smart Call Block) است. این ویژگی به شما کمک می‌کند از تماس‌های ناخواسته جلوگیری کنید.
*این ویژگی به صورت پیش‌فرض خاموش است اما با تنظیمات تلفن می توانید آن را فعال کنید، البته توجه داشته باشید که این ویژگی از طرف مخابرات ارائه شده باشد.

انسداد تماس در یک نگاه

تنظیمات	توضیحات
خاموش (off)	عملکرد انسداد تماس غیرفعال است. این حالت پیش فرض است.
روشن (on)	عملکرد انسداد تماس فعال است. در این حالت تلفن بی‌صدا زنگ می‌زند. هنگام زنگ زدن تلفن و/یا پس از تماس، می توان شماره ها را به لیست اضافه کرد (برای فعال کردن، بخش 1 را ببینید).
مخاطبین ناشناس (ANONYME)	این ویژگی به شما اجازه می دهد تا تماس های ورودی بدون شماره و ناشناس را مسدود کنید (مثل تماس های خصوصی، تماس های بین المللی و غیره) (برای فعال کردن، بخش 2 را ببینید).

1. حالت دستی مسدود کردن تماس (Manual call block)

مسدود کردن تماس بصورت دستی ساده ترین گزینه هنگام شروع است. هنگامی که در تنظیمات انسداد تماس **ON** را انتخاب کنید، تمام شماره های ذخیره شده در لیست مسدودی شما مسدود خواهند شد. می‌توانید در هر زمان شماره ای را اضافه یا حذف کنید.

نحوه مسدود کردن تماس ورودی:
اگر عملکرد انسداد تماس روی ON (روشن) تنظیم شده است، زمانی که تلفن در حال زنگ زدن است، کلید ◉ را فشار دهید. این عمل تماس را خاتمه داده و به شما این امکان را می–دهد که با یک کلیک شماره را در لیست مسدودی ذخیره کنید.
برای تأیید ذخیره این شماره در لیست مسدودی، کلید OK/MENU را فشار دهید.
مهم: اگر تأیید نکنید، شماره به لیست مسدودی اضافه نخواهد شد و تماس بعدی به طور عادی صورت می گیرد.

1.1. فعال سازی حالت دستی

MENU	CALL BLOCK	BLOCK SET	OFF
			ON*

به ترتیب زیر عمل کنید:
-کلید OK/MENU و سپس ▲ یا ▼ را برای انتخاب CALL BLOCK (انسداد تماس) بزنید.
-کلید OK/MENU و سپس ▲ یا ▼ را برای انتخابBLOCK SET (تنظیم مسدودی) بزنید.
-کلید OK/MENU و سپس ▲ یا ▼ را برای انتخاب On (حالت دستی) بزنید.
یا
-در حالت آماده به کار، کلید ◉ را برای دسترسی مستقیم به BLOCK SET (تنظیم مسدودی) بزنید.
پس از فعال کردن این گزینه، آیکون انسداد تماس ◉ بر روی LCD نمایش داده می شود.

1.2. افزودن شماره ها به لیست مسدودی

در حالت آماده به کار
1. کلید ◉ را بزنید، واژه BLOCK SET (تنظیم مسدودی) نشان داده می شود. کلید OK/MENU و سپس ▲ یا ▼ را برای انتخاب CALL BLOCK (انسداد تماس) بزنید.
کلید OK/MENU را بزنید، واژه BLOCK SET (تنظیم مسدودی) نمایش داده می شود.
2. کلید ▲ یا ▼ را بزنید تا BLOCKLIST (لیست مسدودی) را انتخاب کنید.
3. کلید OK/MENU و سپس ▲ یا ▼ را برای انتخاب گزینهADD بزنید، شماره را جهت مسدود نمودن وارد کرده و برای ذخیره تنظیمات، کلید OK/MENU را بزنید.

توجه: دو روش دیگر برای افزودن شماره ها از تماس ورودی و خروجی به لیست مسدودی وجود دارد:

a) از تماس های ورودی

- کلید OK/MENU و سپس ▲ یا ▼ را برای انتخاب CALL LIST بزنید.
- کلید OK/MENU و سپس ▲ یا ▼ را برای انتخاب شماره در لیست تماس ورودی بزنید.
- کلید OK/MENU و سپس ▲ یا ▼ را بزنید تا گزینه ADD to BLIST را انتخاب کنید.
- کلید OK/MENU را بزنید تا شماره نشان داده شود، سپس OK/MENU را فشار دهید تا شماره در لیست مسدودی ذخیره گردد.

b) از تماس های خروجی

- کلید◉و سپس ▲ یا ▼ را بزنید تا شماره را در لیست شماره گیری مجدد (redial list) انتخاب کنید.
- کلید OK/MENU و سپس ▲ یا ▼ را بزنید تا گزینه ADD to BLIST را انتخاب کنید.
-کلید OK/MENU را بزنید تا شماره نشان داده شود، سپس OK/MENU را فشار دهید تا شماره در لیست مسدودی ذخیره گردد.

1.3. ویرایش شماره در لیست مسدودی

در حالت آماده به کار:
1. گام 1 و 2 را در بخش 1.2 تکرار کنید.
2. کلید OK/MENU و سپس ▲ یا ▼ را بزنید تا گزینه EDIT (ویرایش) را انتخاب کنید، دوباره ▲ یا ▼ را بزنید تا شماره را جهت ویرایش انتخاب کنید، کلید OK/MENU را بزنید تا ویرایش را انجام دهید و مجددا OK/MENU را برای ذخیره عملیات بزنید.

1.4. حذف شماره در لیست مسدودی

1.4.1. حذف فقط یک شماره از لیست مسدودی

در حالت آماده به کار
1. گام 1 و 2 را در بخش 1.2 تکرار کنید.
2. کلید OK/MENU و سپس ▲ یا ▼ را بزنید تا گزینه DELETE را انتخاب کنید، کلید ▲ یا ▼ را بزنید تا شماره را برای حذف انتخاب کنید، OK/MENU را مجددا برای تایید حذف فشار دهید.

1.4.2. حذف تمامی شماره ها از لیست مسدودی

در حالت آماده به کار
1. گام 1 و 2 را در بخش 1.2 تکرار کنید.
2. کلید OK/MENU و سپس ▲ یا ▼ را بزنید تا گزینه DELETE ALL را انتخاب کنید، مجددا کلید OK/MENU را بزنید واژه "CONFIRM?" (تایید؟) نشان داده می–شود، برای تایید کلید OK/MENU را بزنید.

3. حالت انسداد مخاطبین ناشناس (Anonymous)

این ویژگی انسداد اتوماتیک به شما اجازه می دهد تا تماس های ورودی بدون شماره و ناشناس را مسدود کنید. این ویژگی را می توان مستقل از حالت های مسدودی دیگر، فعال یا غیرفعال کرد.

MENU	CALL BLOCK	BLOCK ANONYM	OFF*
			PRIVATE
			ALL

به ترتیب زیر عمل کنید:
- کلید OK/MENU و سپس ▲ یا ▼ را برای انتخاب CALL BLOCK بزنید.
- کلید OK/MENU و سپس ▲ یا ▼ را برای انتخاب BLOCK ANONYM بزنید.
- کلید OK/MENU و سپس ▲ یا ▼ را بزنید تا یکی از گزینه های زیر را انتخاب کنید.

3.1. انسداد تماس های خصوصی

این حالت، تماس‌های ورودی را مسدود می‌کند که شماره های آن بصورت عمدی از شما خصوصی و مخفی نگه داشته شده اند.
در حالت آماده به کار:
1. کلید ◉ را بزنید، واژه BLOCK SET (تنظیم مسدودی) نشان داده می شود، کلید OK/MENU و سپس ▲ یا ▼ را برای انتخاب CALL BLOCK (انسداد تماس) بزنید، کلید OK/MENU را بزنید، BLOCK SET نمایش داده می شود.
2. کلید ▲ یا ▼ را برای انتخاب BLOCK ANONYM بزنید.
3. کلید OK/MENU و سپس ▲ یا ▼ را بزنید تا PRIVATE (خصوصی) را انتخاب کنید، جهت تایید کلید OK/MENU را مجددا فشار دهید.
4. آیکون انسداد تماس ◉ بر روی قسمت پایین LCD نمایش داده می شود.

3.2. انسداد تمام تماس های ناشناس

این ویژگی به شما اجازه می دهد تا تمامی تماس های ورودی شامل تماس های خصوصی، تماس های بین المللی، تماس های خارج از محدوده را مسدود کنید.
در حالت آماده به کار:
1. گام 1 و 2 را در بخش 3.1 تکرار کنید.
2. کلید OK/MENU و سپس ▲ یا ▼ را بزنید تا گزینه ALL (همه) را انتخاب کنید، کلید OK/MENU را جهت تایید بزنید.
3. آیکون انسداد تماس ◉ بر روی قسمت پایین LCD نمایش داده می شود.

3.3. خاموش کردن انسداد تماس ناشناس

در حالت آماده به کار:
1. گام 1 و 2 را در بخش 3.1 تکرار کنید.
2. کلید OK/MENU و سپس ▲ یا ▼ را بزنید تا گزینه OFF (خاموش) را انتخاب کنید، کلید OK/MENU را جهت تایید بزنید.
3. اگر حالت کلی انسداد تماس نیز خاموش باشد، آیکون ◉ از روی LCD محو می–شود (بخش 1. و 2. را بخوانید).

سوالات متداول

بطور کلی، هر زمان که در استفاده از دستگاه به مشکل برخوردید، باتری ها را از گوشی ها به مدت یک دقیقه خارج کرده، سپس برق پایه را نیز قطع و وصل کرده و مجددا باتری ها را نصب کنید.

نکات ایمنی

از این دستگاه برای تماس های ضروری در زمان قطعی برق نمی توان استفاده کرد.
از تلفن برای گزارش نشت گاز در مجاورت محل نشتی یا در زمان انفجار احتمالی استفاده نکنید.
دستگاه را به دلیل ایجاد شوک برقی هرگز کالبد شکافی نکنید.
باتری ها را به دلیل مواد شیمیایی خطرناک باز و کالبد شکافی نکنید.
تلفن را در معرض نور مستقیم خورشید یا محیط بسیار سرد و مرطوب قرار ندهید.
برای اجتناب از سیگنال های مزاحم، دستگاه را حداقل یک متر از تلفن و یا وسایل برقی دیگر دور نگه دارید.

بازیافت

این دستگاه قابل بازیافت می باشد لذا از دور انداختن آن همراه با زباله های خانگی جلوگیری کنید.

درحفظ سلامت محیط زیست کوشا باشید.

Alcatel

اسم و لوگو Alcatel علائم تجاری شرکت Nokia بوده
و مجوز استفاده از آن در اختیار شرکت ATLINKS می باشد

در صورت سوال و یا نیاز به هرگونه پشتیبانی فنی با خدمات پس از فروش لادیز الکترونیک تماس حاصل فرمایید.

تلفن: (021) 88341300
فکس: (021) 88341500

aftersales@ladizelectronic.com

شرکت لادیز الکترونیک نماینده انحصاری تلفن های اداری، خانگی و تحت شبکه آلکاتل در ایران
www.ladizelectronic.com

Alcatel

F370 PLUS VOICE

QUICK START-UP GUIDE

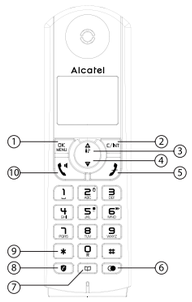

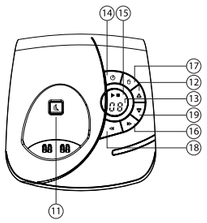

ENGLISH

This packaging includes an RJ11 telephone cable for installations equipped with internet router:

- If you have an internet router, please connect the telephone cable directly to it.
- If you do not have an internet router, please use the telephone socket provided.

FIRST INSTALLATION

Installing your telephone:

- Make the various connections on the base. Connect the telephone line cable to the telephone wall socket or to the box, and plug the power cable into a mains socket.
- Insert the batteries into the handset.

Before you start using your phone, charge the batteries for 15 hours.

⚠ Use only the AC adapter and rechargeable batteries supplied with your phone.

Handset and base keys

1. **OK/Menu Key**
2. **Return / Intercom Key**

3 & 4. **Navigation Key**

5. **Hang up/Exit Key**
6. **Redial Key**
7. **Phone book Key**
8. **Call blocking key*** - *To block calls, you have to subscribe to the Caller ID service. Contact your land line operator. In standby mode: Direct access to the Call blocking menu.
9. **Star key** - To switch between an internal call and an external call/ **# key** - press and hold the key to activate/deactivate the ringer.
10. **Talk/Hands-free Key**
11. **Handset search/pairing key** - To locate the handset/to start the pairing procedure. For multi-handset models, all supplied handsets are already paired with the base. Pairing is therefore only necessary for additional handsets you purchase and for defective handsets you need to replace.
12. Increase the volume of the loudspeaker (+) during message playback.
13. **SCREEN**

0F->--	The answering machine function is deactivated (OFF)
0n-> XX	The answering machine function is activated (ON) and XX messages have been recorded on the answering machine
00	On steady: the answering machine contains no messages
XX	Flashing: XX new messages have been recorded on the answering machine
ZZ	On steady: the answering machine contains ZZ messages that have already been heard (and no new messages)
XX/FF	XX flashes alternately with FF: XX new messages have been recorded and the answering machine memory is full
FF	Flashing: the answering machine memory is full with messages that have already been heard; no new message has been received
--/XX	XX flashes alternately with - -: the time has not been set and XX new messages have been recorded
- -	- - flashes: the time has not been set, no new message has been received
XX	On steady: playback of the old message XX already received Flashing: playback of new message XX received
A1/A2	On steady: outgoing message playback, with A1 corresponding to the outgoing message for Answering machine/ Recorder mode and A2 corresponding to the outgoing message for Answering machine only mode
XX/An	XX flashes alternately with An: a new message XX is currently recorded An means that message recording is in progress
rA	Flashing: remote access is in progress
LX	On steady: indicates the current sound level, with X between 1 and 8

14. Press to activate the answering machine function. Press again to deactivate the answering machine function.
15. Press to listen to the message. Press again to stop message playback.
16. Press to stop playback of the current message and skip to the next message.
17. Press once to delete the message being played back. Press and hold to delete all old messages.
18. Press to play back the current message from the start. Press twice to stop playback and skip back to the previous message.
19. Decrease the volume of the loudspeaker (-) during message playback.

*Subject to subscription and availability of the service from the land line operator.

Screen icons

- Indicates that the call blocking function is activated.
- Indicates that the batteries are fully charged.
- Indicates that the batteries are completely disc harged.
- Indicates that an external call is in progress or has been put on hold. The icon flashes when you receive a call.
- Indicates that you have received a voice message*.
- Indicates new unanswered calls* in the call log.
- Appears on the screen when the alarm clock function is activated.
- Appears on the screen when you switch to hands-free mode.
- On steady: indicates that the answering machine is active. Flashing: when the answering machine has recorded new messages.
- Appears on the screen when you turn off the ringer.
- Indicates that the handset is paired with the base and that it is within range of the base. The icon disappears when the handset is out of range or searching for the base.

Using your telephone

Receive and end a call

- or

Make a call

- before or after dialling a number.
- From the redial list: / or / .
- From the call log*: / or / .

Comment: You must subscribe to the Caller ID service for the number or name of the caller to appear in the call log.

- From the phone book: / or / OK/MENU .
- During a call: press to activate/deactivate hands-free mode: .

To call an internal handset:

- If you only have 2 handsets paired with the base: C/INT .
- If you have more than 2 handsets registered with the base: C/INT / or / select the handset number / OK/MENU .
- To call all of the handsets: C/INT / or / select **CALL ALL**/ OK/MENU .

During the call:

- Press OK/MENU until you select the **INTERCOM** option.
- Press OK/MENU and select the handset with which you want to make the 3-way conference.
- The internal caller presses to accept the internal call.
- Press and hold ✱ on the calling handset to establish the conference.

Phone book: 50 entries

Save a contact in the phone book

OK/MENU / or to select **PHONE BOOK** / OK/MENU / OK/MENU / select **ADD** / type the name of the contact / OK/MENU / type the telephone number of the contact / OK/MENU / select the melody / OK/MENU .

Fr the Duo and Trio models, the phone book, the call log and the last number saved for callback are common to all the handsets.

Settings

You can customise this phone according to your preferences.

To access the different options, press: OK/MENU .

- To personalise a handset (name, melody, language, etc.): or to select **HS SETTINGS** / OK/MENU .
- To modify the PIN code, associate a handset, reset it: or to select **BS SETTINGS** / OK/MENU .

Answering machine settings

Settings from the handset

Switching the answering machine on and off

- OK/MENU / or to select **ANS. MACHINE** / OK/MENU / or to select **TAM ON/OFF** / OK/MENU / or to select **ON** or **OFF** / OK/MENU .

Set the answering machine mode

- OK/MENU / or to select **ANS. MACHINE** / OK/MENU / or to select **TAM SETTINGS** / OK/MENU / or to select **ANSWER MODE** / OK/MENU / or to select **ANSWER ONLY** or **ANS & REC** / OK/MENU .

Record a personalised outgoing message

- OK/MENU / or to select **ANS. MACHINE** / OK/MENU / or to select **TAM SETTINGS** / OK/MENU / to select **OGM SETTINGS** / OK/MENU / or to select **ANSWER ONLY** or **ANS & REC** / OK/MENU / or to select **RECORD MESS** / OK/MENU to start the recording / OK/MENU to end the recording.

Message playback and delete

- OK/MENU / or to select **ANS. MACHINE** / OK/MENU / to select **MSG PLAYBACK** / OK/MENU to start playback.
- During message playback you can select OK/MENU , then or to select the option to delete the message in playback.

Change the number of rings

- OK/MENU / or to select **ANS. MACHINE** / OK/MENU / or to select **TAM SETTINGS** / OK/MENU to select **ANSWER DELAY** / or to select **2 - 8 RINGS** or **TIME SAVER** / OK/MENU .

Access your answering machine remotely

Dial your telephone number / while playing the personalised outgoing message, press ✱ and dial your remote access code (master PIN code 0000).

Remote access enables the following actions:

Action	Key
Replay messages	5
Replay the current message from the start	4
Erase the message	2(during playback)
Skip the message	6
Switch on the answering machine	7
Switch off the answering machine	9

Setting the answering machine language

- OK/MENU / or to select **ANS. MACHINE** / OK/MENU / or to select **TAM SETTINGS** / OK/MENU / or to select **LANGUAGE** / OK/MENU / or to choose the desired language OK/MENU .

This telephone is built-in with Basic Call Block feature*. This feature will help you avoid nuisance calls by only allowing some numbers to make your phone ring. Default setting of Basic Call Block in this telephone is **OFF** but you can enable it via your phone settings, as explained in the following paragraphs.

**This feature requires a subscription of Caller Line Identification service from your telephone service provider.*

CALL BLOCK OVERVIEW

Setting	Explanations
OFF	Call Block function (Block all call with numbers) is Disabled. This is the default mode.
ON	Call Block function is set to On. Numbers registered in the black list will not go through and the phone will ring silently. Numbers can be added to the list while the phone is ringing and / or after a call (to enable, see part 1).
ANONYM	This extra feature allows you to block call that do not have a number attached to them (ie private calls, international calls, etc). This option can be enabled on top of any of the previous four (to enable, see part 2)

1. Manual call block mode

Manual call block is the easiest option when starting out. When you chose **ON** in the call block settings, all calling numbers registered in your blacklist will be blocked. You can add/remove numbers from that list at any time.

How to block an incoming call:

When the phone is ringing and before answering, press will terminate the call and offer you the option to register the number to the blacklist in one click.

Then to confirm the registration of this number in the blacklist, press OK/MENU .

IMPORTANT : if you don't confirm, the number will not be added to the blacklist and the next call will go through normally.

1.1. Enable MANUAL mode

MENU → CALL BLOCK → BLOCK SET → OFF / **ON***

1. Press OK/MENU , press or to select **CALL BLOCK**.
2. Press OK/MENU , press or to select **BLOCK SET**.
3. Press OK/MENU , press or to select **ON**.

OR

In idle mode, press to access **BLOCK SET.** directly. After you enable this option, the call block icon will be displayed on the LCD.

1.2. Add numbers to Blacklist

In idle mode,

1. Press key, **BLOCK SET.** is displayed, or *Press OK/MENU to press or to select **CALL BLOCK**, press OK/MENU to show **BLOCK SET**.*
2. Press or to select **BLOCKLIST**.
3. Press OK/MENU , press or to select **ADD**, enter number to be blocked, press OK/MENU to save.

NOTE: 2 more ways to add incoming and outgoing call numbers in Block list:

1. From incoming call numbers
- Press OK/MENU , press or to select **CALL LIST**.
- Press OK/MENU , press or to select call list entry.
- Press OK/MENU , press or to select to **ADD to BLIST**.
- Press OK/MENU to show selected number, press OK/MENU to save to **Block list**.

2. From outgoing call numbers
- Press , press or to select redial list entry.
- Press OK/MENU , press or to select to **ADD to BLIST**.
- Press OK/MENU to show selected number, press OK/MENU to save to **Block list**.

1.3. Edit numbers in Blacklist

In idle mode,

1. Repeat step 1 and 2 in Section 1.2.
2. Press OK/MENU , press or to select **EDIT**, press or to select number to be edited, press OK/MENU to edit, and then press OK/MENU to save.

1.4. Delete numbers in Blacklist

1.4.1. Delete a number from blacklist

In idle mode,

1. Repeat step 1 and 2 in Section 1.2.
2. Press OK/MENU , press or to select **DELETE**, press or to select number to be deleted, press OK/MENU , to confirm.

1.4.2. Delete all numbers from blacklist

1. Repeat step 1 and 2 in Section 1.2.
2. Press OK/MENU , press or to select **DELETE ALL**, press OK/MENU , **CONFIRM?** is shown, and then press OK/MENU to confirm.

2. Anonymous call block mode

This feature allows you to block numbers that do not display a number on your phone. It can be enabled or disabled independently from the previous call block modes.

MENU → CALL BLOCK → BLOCK ANONYM → **OFF*** / PRIVATE / ALL

1. Press OK/MENU , press or to select **CALL BLOCK**.
2. Press OK/MENU , press or to select **BLOCK ANONYM**.
3. Press OK/MENU , press or to select one of the options.

2.1. Block Private Calls

This mode will block incoming calls that have been purposely kept their numbers private from you.

In idle mode,

1. Press key, **BLOCK SET.** is displayed, or *Press OK/MENU to press or to select **CALL BLOCK**, press OK/MENU to show **BLOCK SET**.*
2. Press or to select **BLOCK ANONYM**.
3. Press OK/MENU , press or to select **PRIVATE**, press OK/MENU to confirm.
4. will be displayed on the lower side of LCD.

2.2. Block All Anonymous Calls

This mode will block all incoming anonymous calls, including private calls, international calls, pay phone and other out-of-area calls.

In idle mode,

1. Repeat step 1 and 2 in Section 2.1.
2. Press OK/MENU , press or to select **ALL**, press OK/MENU to confirm.
3. will be displayed on the lower side of LCD.

2.3. Set Block Anonymous Calls OFF

In idle mode,

1. Repeat step 1 and 2 in Section 2.1.
2. Press OK/MENU , press or to select **OFF**, press OK/MENU to confirm.
3. will only disappear from the LCD if the regular call block (see 1. And 2.) is also set to **OFF**.

IN CASE OF A PROBLEM

In general, if there is a problem, remove the batteries from all of the handsets. Disconnect your device. Wait approximately 1 minute.

Reconnect the power supply and reinsert the batteries.

SAFETY

This telephone is not designed for Emergency calls when the main power fails.

Do not use your telephone to notify a gas leak or other potential explosion hazard.

Do not open your device or its power supply to avoid risk of electrical shock.

Do not attempt to open the batteries, as they contain hazardous chemical substances.

Your telephone must be located in a dry place away from hot, humide and direct sunlight condition. To avoid radio signal interference, place the phone at least 1 meter away from other electrical appliances or other phones.

ENVIRONMENT

This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste. The European Union has implemented a specific collection and recycling system for which producers are responsible.

Help us protect the environment in which we live!

CONFORMITY CE

Hereby, ATLINKS EUROPE declares that the radio equipment type DECT is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.alcatel-home.com

Average power per channel: 10mW

Maximum Output Power (NTP) : 24dBm

Frequency Range : 1880-1900MHz

ATLINKS Europe
28 Boulevard Belle Rive
92500 RUEIL-MALMAISON France
RCS Nanterre 508 823 747

F370 Plus Voice
A/W No: 10002574 Rev.0 (FA/EN)
Printed in P.R.C.